

IMPORTANT:- FOR YOUR INFORMATION

Electricity is dangerous and an RCD must not be used as a substitute for normal precautionary measures.

Always unplug from mains supply before any inspection or repair to equipment.

OPERATING INSTRUCTIONS

STEP 1

1. Insert your RCD Adaptor into a fixed wall mounted 13 amp mains supply socket.
2. Switch on power at socket, if applicable.
3. Indicator window is CLEAR.

STEP 2

1. Press the RESET button in as far as it will go and release. The indicator window will turn RED.
2. Press the TEST button. The indicator window will turn CLEAR, if RED does not appear, DO NOT USE*
3. You have now tested your RCD Adaptor.

STEP 3

Plug appliance into RCD Adaptor.


STEP 4

Press the RESET button again as far as it will go and release. The indicator window will turn RED. Ready for use.

STEP 5

Should your RCD then instantly trip (the indicator window turns CLEAR) unplug from socket and have the appliance checked immediately for a potential earth leakage fault by a qualified electrician. If the RCD Adaptor is disconnected from the power supply, it will require resetting - repeat the test procedure above from step 1.

** Return to place of purchase with till receipt*

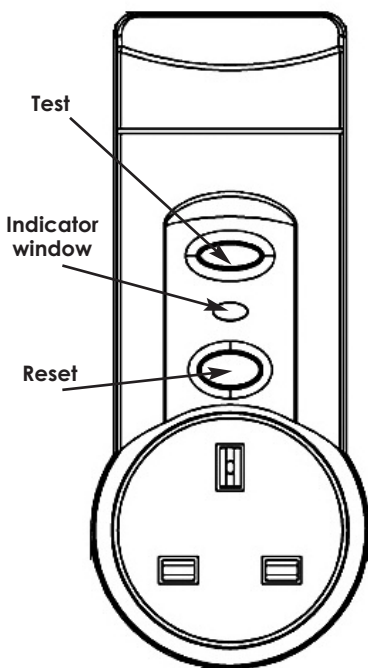

IMPORTANT

Do not allow children to tamper with electrical devices. Should your RCD Adaptor repeatedly trip with an appliance connected or fail to trip when tested, seek advice immediately from a qualified electrician. The RCD Adaptor has been designed for storage and use between -5°C degrees and $+40^{\circ}\text{C}$ degrees, and at an altitude no greater than 2000m above sea level.

Care must be taken not to subject your adaptor to abnormal pollution by smoke, chemicals or flammable fumes, salt-laden spray, prolonged periods of high humidity, immersion, repeated dropping or other abnormal conditions.

This device does not protect against electric shock due to contact with both conductors or a fault in the wiring supplying this device.

The **RCD Adaptor** is particularly suitable for use with electric lawnmowers and hedge trimmers where cables are in danger of being cut. Also for use with all appliances around the home, especially in the kitchen with kettles and irons where water is present. When used with an extension reel, ensure that your **RCD Adaptor** is plugged in at the mains socket outlet for maximum protection.

TECHNICAL INFORMATION

Rated Voltage:	220-240V AC~50Hz
Maximum Operating Current:	13A
Maximum Load:	3kW
Rated Trip Current:	30mA

Type A RCD

Double pole RCD contact break

Note: This product runs warm

NOTE: Product & Packaging Disposal

When disposing of this item and its packaging please follow local regulations and use an appropriate waste disposal centre.

See GreenBrook website for further details.

GUARANTEE

Your GreenBrook RCD Adaptor is guaranteed for 1 year from the date of purchase.

This is in addition to your statutory rights.

**PLEASE KEEP THESE INSTRUCTIONS
SAFE FOR FUTURE REFERENCE**



**GREEN
BROOK**
ELECTRICAL
WEST ROAD . HARLOW
ESSEX . CM20 2BG . UK
info@greenbrook.co.uk
www.greenbrook.co.uk