

3. DAILY FREQUENCY

(selected 1 OVERLEAF)

a) Press **DAY/SKIP (G)** to select the day you want to set the programmes. The flashing bar at the top will move across the days as **DAY/SKIP (G)** button is pressed. Press **ENTER (I)** to confirm.

b) The far right hand side of display will flash. It might be advisable to refer to the programme planner. Press **PROG NO (F)** to select the programme number. Press **ENTER (I)** to confirm.

E.G.

SUN	MON	TUE	WED	THU	FRI	SAT
—	—	—	—	—	—	—
ON	0:00	1	1			
CLK	PROG	AUTO	MAN	freq	PROG	NO

The first programme number selected (4 available)

c) The HOUR will flash. Press **HR/MIN (E)** to select required hour. Press **ENTER (I)** to confirm.

d) The MINUTES will flash. Press **HR/MIN (E)** to select required minutes. Press **ENTER (I)** to confirm.

SUN	MON	TUE	WED	THU	FRI	SAT
—	—	—	—	—	—	—
ON	16:20	1	1			
CLK	PROG	AUTO	MAN	freq	PROG	NO

The first ON time is 4.20pm every Tuesday only

e) Repeat above steps 3c to 3d to set the OFF time.

SUN	MON	TUE	WED	THU	FRI	SAT
—	—	—	—	—	—	—
OFF	17:20	1	1			
CLK	PROG	AUTO	MAN	freq	PROG	NO

The first OFF time is 5.20pm every Tuesday only

f) Repeat steps 3b to 3e to either enter or change each of the remaining programmes. There are a maximum of 4 ON and 4 OFF times available - although it is not necessary to use them all.

SUN	MON	TUE	WED	THU	FRI	SAT
—	—	—	—	—	—	—
On	19:00	1	2			
CLK	PROG	AUTO	MAN	freq	PROG	NO

Second ON time is 7.00pm every Tuesday only

SUN	MON	TUE	WED	THU	FRI	SAT
—	—	—	—	—	—	—
OFF	20:00	1	2			
CLK	PROG	AUTO	MAN	freq	PROG	NO

Second OFF time is 8.00pm every Tuesday only

g) To run set programmes press **MODE (H)** to move bottom bar to **AUTO**. Go to section 5. AUTOMODE

4. WEEKLY FREQUENCY

(selected 7 OVERLEAF in section 2)

All the days at the top will have a bar underneath.

a) Press **DAY/SKIP (G)** to move along the bar at the top and press **ON/OFF** to select or eliminate days of the week. When a day is eliminated there will be no bar underneath it. After the days have been selected the timer will only operate on days with bars underneath. Press **ENTER (I)** to confirm.

SUN	MON	TUE	WED	THU	FRI	SAT
—	—	—	—	—	—	—
00:00					7	1
CLK	PROG	AUTO	MAN	freq	PROG	NO

Only Sundays, Tuesdays and Thursdays have been selected to run ALL the programmes

b) Repeat steps 3b to 3e to either enter or change the remaining programmes.

After all desired programme settings (maximum of 4) have been completed, press **MODE (H)** to move bottom bar to **AUTO** to run the programmes

5. AUTO MODE

During **AUTO MODE** an **O** will appear on the far right hand side of display when the programmes are not active. (not necessarily on all models)

SUN	MON	TUE	WED	THU	FRI	SAT
—	—	—	—	—	—	—
2:18					7	0
CLK	PROG	AUTO	MAN	freq	PROG	NO

Indicates programmes not active

A temporary override switch is available in **AUTO MODE**. Press **ON/OFF (D)** to immediately either turn **ON** or **OFF**. However, this will disengage when:

- the current time reaches midnight.
- the mode condition is changed.
- the next programmed time schedule is reached.

6. USING MANUAL OVERRIDE SWITCH

Press **MODE (H)** to move bottom bar to **MAN** position and press **ON/OFF (D)** to turn timer **ON** and **OFF** as required.

7. REVIEWING AND/OR CLEARING PROGRAMMES

1. Press **MODE (H)** to move bottom bar to the **PROG** position.

2. Press **ENTER (I)** repeatedly in order to step through your programme schedules. Any amendments to times can be made here.

3. To clear a programme schedule, change the **ON** and **OFF** time settings to be the same, which will eliminate it.

8. RESET FUNCTION

Press **RESET** with tip of ball point pen to clear all data entered into the timer.

In case of any difficulty, please ring our technical **HELP LINE** on 01279 641800.

Please ensure you have product close to hand.

PLEASE KEEP OPERATING INSTRUCTIONS SAFELY FOR FUTURE REFERENCE



3. DAILY FREQUENCY

(selected 1 OVERLEAF)

a) Press **DAY/SKIP (G)** to select the day you want to set the programmes. The flashing bar at the top will move across the days as **DAY/SKIP (G)** button is pressed. Press **ENTER (I)** to confirm.

b) The far right hand side of display will flash. It might be advisable to refer to the programme planner. Press **PROG NO (F)** to select the programme number. Press **ENTER (I)** to confirm.

SUN MON TUE WED THU FRI SAT

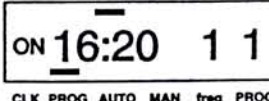
E.G.  The first programme number selected (4 available)

CLK PROG AUTO MAN freq PROG NO

c) The HOUR will flash. Press **HR/MIN (E)** to select required hour. Press **ENTER (I)** to confirm.

d) The MINUTES will flash. Press **HR/MIN (E)** to select required minutes. Press **ENTER (I)** to confirm.

SUN MON TUE WED THU FRI SAT

 The first ON time is 4.20pm every Tuesday only

CLK PROG AUTO MAN freq PROG NO

e) Repeat above steps 3c to 3d to set the OFF time.

SUN MON TUE WED THU FRI SAT

 The first OFF time is 5.20pm every Tuesday only

CLK PROG AUTO MAN freq PROG NO

f) Repeat steps 3b to 3e to either enter or change each of the remaining programmes. There are a maximum of 4 ON and 4 OFF times available - although it is not necessary to use them all.

SUN MON TUE WED THU FRI SAT

 Second ON time is 7.00pm every Tuesday only

CLK PROG AUTO MAN freq PROG NO

SUN MON TUE WED THU FRI SAT

 Second OFF time is 8.00pm every Tuesday only

CLK PROG AUTO MAN freq PROG NO

g) To run set programmes press **MODE (H)** to move bottom bar to **AUTO**. Go to section 5. AUTOMODE

4. WEEKLY FREQUENCY

(selected 7 OVERLEAF in section 2)

All the days at the top will have a bar underneath.

a) Press **DAY/SKIP (G)** to move along the bar at the top and press **ON/OFF** to select or eliminate days of the week. When a day is eliminated there will be no bar underneath it. After the days have been selected the timer will only operate on days with bars underneath. Press **ENTER (I)** to confirm.

SUN MON TUE WED THU FRI SAT

 Only Sundays, Tuesdays and Thursdays have been selected to run ALL the programmes

CLK PROG AUTO MAN freq PROG NO

b) Repeat steps 3b to 3e to either enter or change the remaining programmes.

After all desired programme settings (maximum of 4) have been completed, press **MODE (H)** to move bottom bar to **AUTO** to run the programmes

5. AUTO MODE

During **AUTO MODE** an **O** will appear on the far right hand side of display when the programmes are not active. (not necessarily on all models)

SUN MON TUE WED THU FRI SAT

 Indicates programmes not active

CLK PROG AUTO MAN freq PROG NO

A temporary override switch is available in **AUTO MODE**. Press **ON/OFF (D)** to immediately either turn **ON** or **OFF**. However, this will disengage when:

- the current time reaches midnight.
- the mode condition is changed.
- the next programmed time schedule is reached.

6. USING MANUAL OVERRIDE SWITCH

Press **MODE (H)** to move bottom bar to **MAN** position and press **ON/OFF (D)** to turn timer **ON** and **OFF** as required.

7. REVIEWING AND/OR CLEARING PROGRAMMES

1. Press **MODE (H)** to move bottom bar to the **PROG** position.

2. Press **ENTER (I)** repeatedly in order to step through your programme schedules. Any amendments to times can be made here.

3. To clear a programme schedule, change the **ON** and **OFF** time settings to be the same, which will eliminate it.

8. RESET FUNCTION

Press **RESET** with tip of ball point pen to clear all data entered into the timer.

In case of any difficulty, please ring our technical **HELP LINE** on 01279 641800.

Please ensure you have product close to hand.

PLEASE KEEP OPERATING INSTRUCTIONS SAFELY FOR FUTURE REFERENCE

