


Intallation / Operating
Instruction for Remote Wirefree Bell Push
DW060AN-C

- No more wires
- Battery included for Transmitter (3V Lithium battery CR2032)
- Transmitter fixing screws included

Please read the instructions fully before attempting installation.

FITTING THE BATTERY

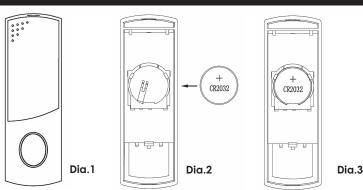

- 1. The battery compartment slot is located on the bottom of the unit.
- Using a flat screwdriver insert into slot and gently push, The base will pop open.
- 3. Insert the 3V Lithium batery (CR2032), Dia.3 and refit the base cover.

INSTALLING TO THE DOOR

Before drilling any holes position position the transmitter on the door or door frame outside (ideally a flat wooden area) and press the button to ensure the signals are getting through to the receiver. Please test with the door closed to simulate actual working conditions.

You should also look to position the transmitter in an unexposed place to protect from rain.

The range of the unit is up to 150 metres (100M on model DW010AN-C) but mounting the transmitter on metal or UPVC doorframes may make the unit inoperative or seriously reduce the operating range.

As with all low powered transmitters the number of wall and ceilings the signal has to travel though between the transmitter and receiver also affects the range.

Once a suitable surface is found remove the transmitter base following (1).

Use these as templates to fix the base on to a doorframe. Ensure the transmitter is the right way up so that the slot is at the bottom.

If mounting on to masonry, wall fixings will be required. Refit unit to base.

IMPORTANT: The screws must be fixed flush or the battery will not maintain contact with the terminals and the unit will not operate.

TUNE SELECTION/LEARN CODE

Please refer to your main doorchime instruction leaflet.

Models: DW010AN-C, DW040AN-C, , DW030AN-C and DW050AHN-C.

TESTING

Test your doorchime by moving the receiver in different rooms at varying distances from the transmitter to ascertain the coverage available in your home this way you are unlikely to miss any visitors.

GUARANTEE Your GreenBrook Wirefree Bell Push is guaranteed for 1 year from the date of purchase. This is in addition to your statutory rights.

PLEASE KEEP THESE INSTRUCTIONS SAFE FOR FUTURE REFERENCE





